

# INSTRUCTIONS FOR INSTALLING THE SOFT CLAMP UMBRELLA KIT ON THE GUERRILLA PAINTER™ BOX




**Coupling Nut**


**Jam Nut    Lock Washer**

**“Stove” Bolt**


**“T” Bolt**

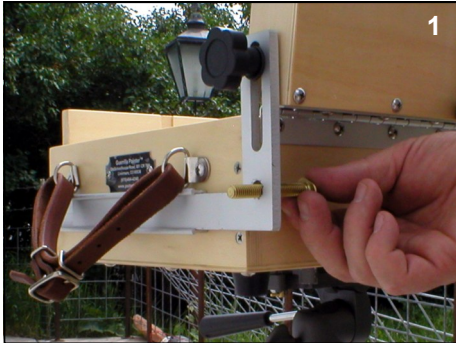

1A. For the 12x16, 9x12 and 6x8 Guerrilla Boxes™ position the “T” Bolt as shown or...

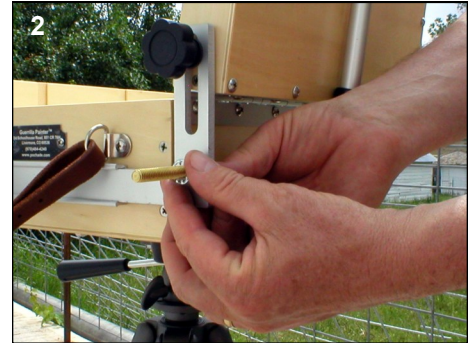

1B. For the Medium and Large French Resistance Pochades position the “Stove” Bolt in the hole provided in either the right or the left “L” Bracket.

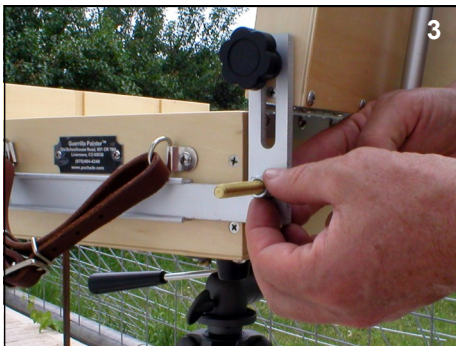


2. Place the Lock Washer on the bolt.

3. Put the Jam Nut on the bolt.

4. Tighten the Jam Nut.




5. Put the Coupling Nut on the bolt.

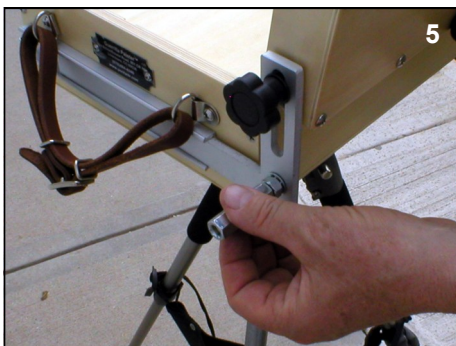

Instructions for FRENCH EASELS  
(Turn page OVER) →

# INSTRUCTIONS FOR INSTALLING THE SOFT CLAMP UMBRELLA KIT ON OTHER EASELS

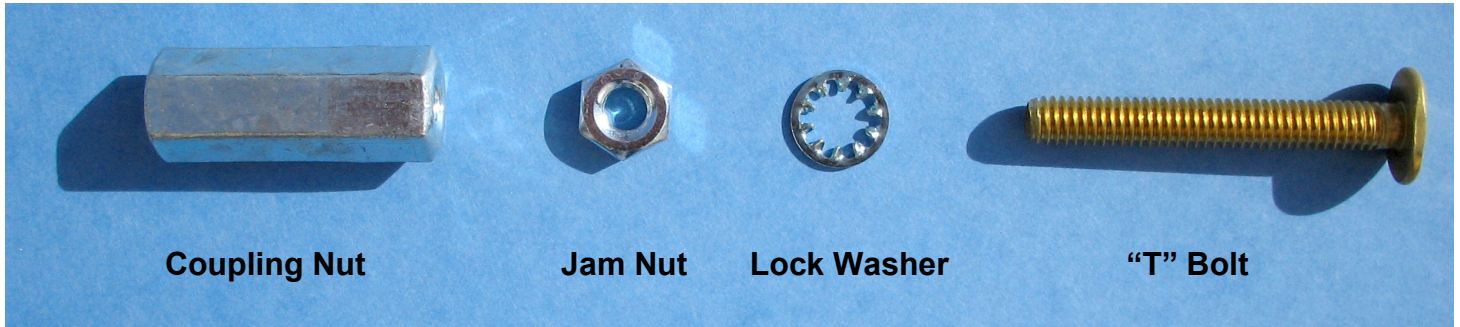

When installing the Soft Clamp Umbrella Kit on a wooden easel, try to locate the head of the "T" Bolt in a way that positions the flat edge of the head in a corner so that the bolt cannot turn.

1. Measure carefully.
2. Drill a 5/16" hole.
3. Insert the "T" Bolt in the hole.

Continue the installation by following the steps on the reverse.

